CLICK MEDICAL


ClickFit™

C2 Reel and Lace Kit Instructions


C2 Duo Reel™ and Lace Kit (RP-C2D-002)

Revised August 2026
For more resources visit:
clickmedical.co/ifu/clickfit


C2 DUO REEL™

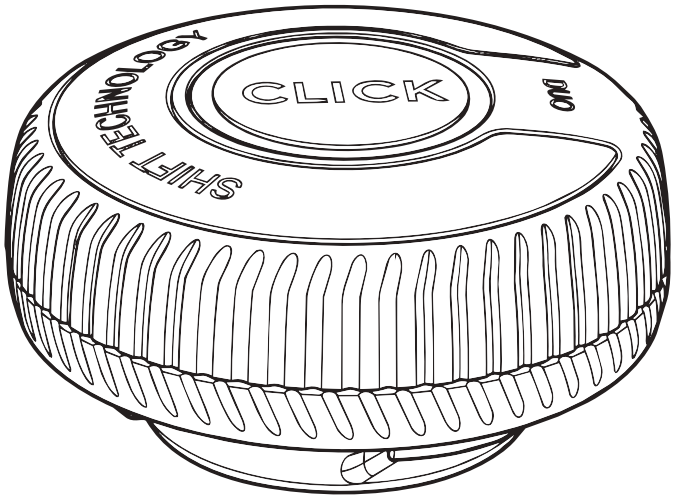


C2 DUO Reel™ Kit Contents (RP-C2D-002):

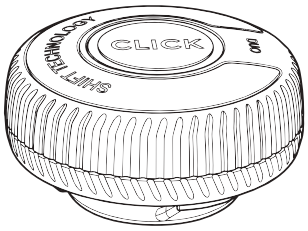


C2 Duo Reel™

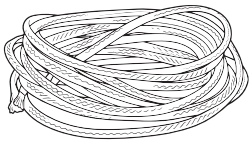

HD Lace (2m)

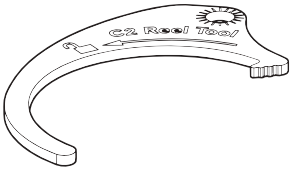

C2 Reel Tool

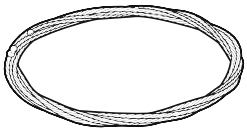

Lace Feeder

ADVISORY

Must be installed by a licensed professional.

Overtightening could compromise circulation. Do not use on patients with nerve issues.

Lace will wear.

- Routinely check for wear or damage.
- Look for broken fibers around areas of high wear.
- Replace lace if a significant amount of fibers are broken.
- Proactively replace lace every 6 months.
- Keep lace away from open flame and sharp edges.
- Weight Limit: 300 lbs / 135 kg

See instructions in other languages:
https://clickmedical.co/ifu

CLICK MEDICAL GUARANTEE

WARRANTY:
www.clickmedical.co/terms/#warranty


U.S. Customers:
Contact Click Medical directly
Help@ClickMedical.co • Help Line: +1 970 670 7012

International Customers:
Please contact your local distributor


CE

Click Medical, LLC, 1205 Hilltop Parkway, W101
Steamboat Springs, CO 80487, USA +1-970-670-7012


1. Using your metal Lace Feeder, lace the Duo Reel by feeding one end of the Lace through one of the small holes in the spool, exiting the larger hole.

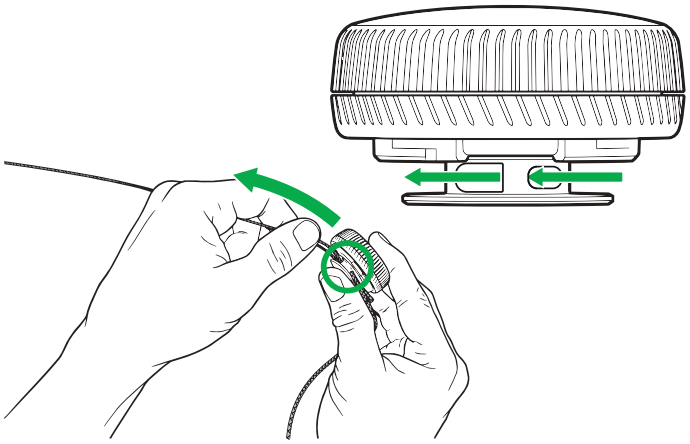


2. Tie the end of the Lace using a single overhand knot. Cut excess Lace, leaving **~5 mm** from knot to lace end.

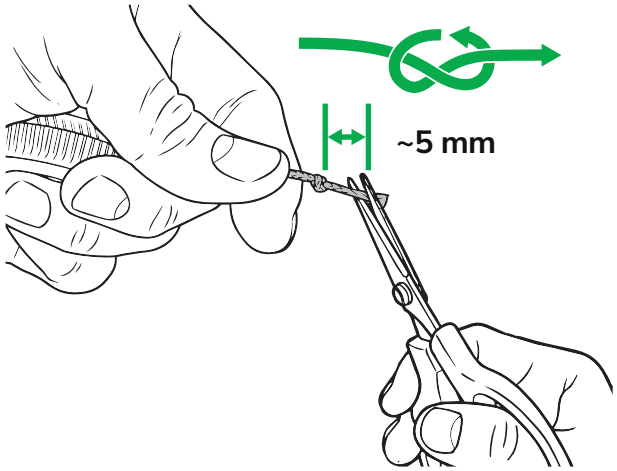


3. Melt the excess lace, creating a cap which will prevent the knot from backing out.

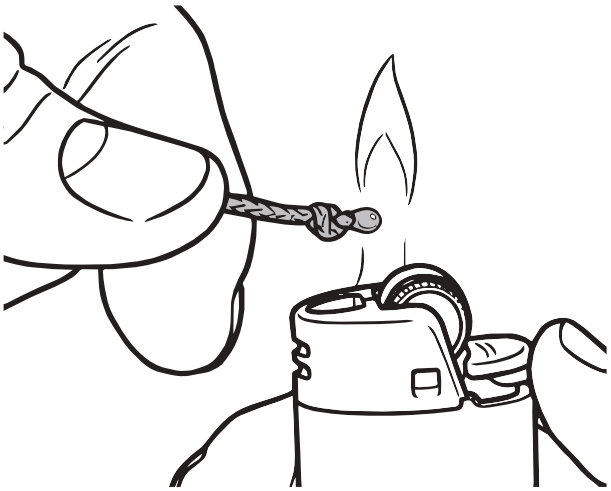


4. Pull firmly on the lace to seat the knot into the spool.

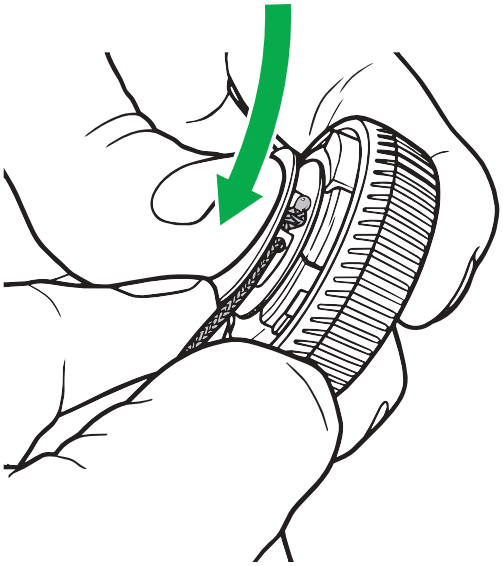


5. Using the metal Lace Feeder, guide Lace through the device and back to the Reel.

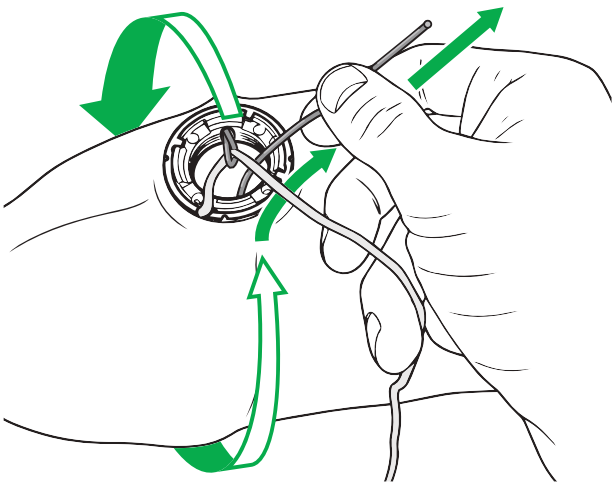


6. Determine Lace length necessary to operate device. Mark length on Lace. Use only the amount of Lace needed to allow the device to fully expand. **Excess Lace can interfere with proper functioning of the Reel.**

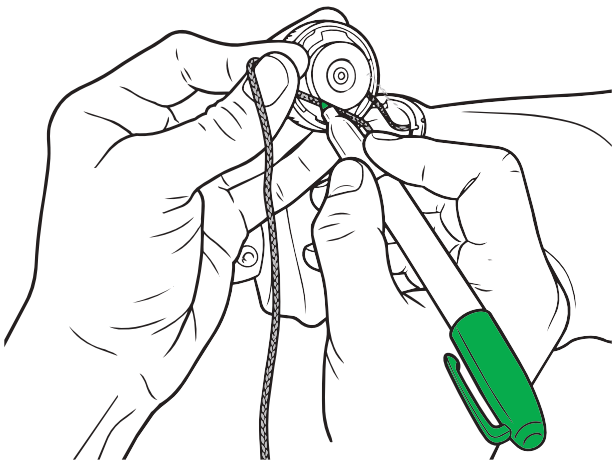


7 Feed second Lace end through remaining small hole in spool, opposite first Lace end, exiting larger hole.

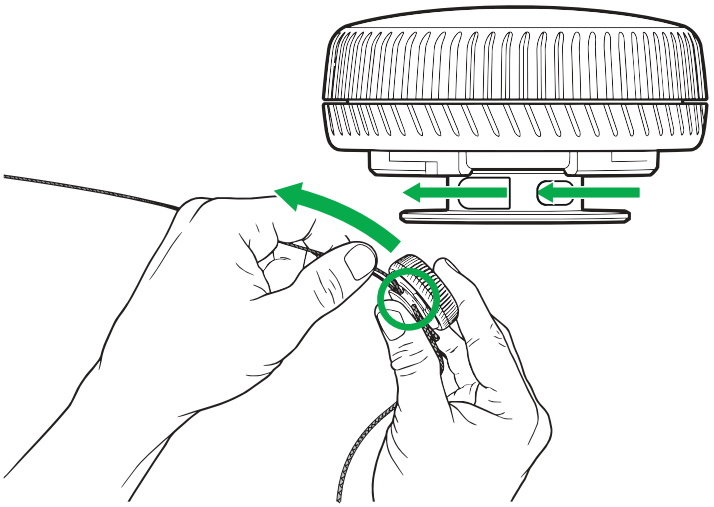


8 At your mark, tie the second Lace end, using a single overhand knot. Cut excess lace, leaving **~5 mm** from knot to lace end.

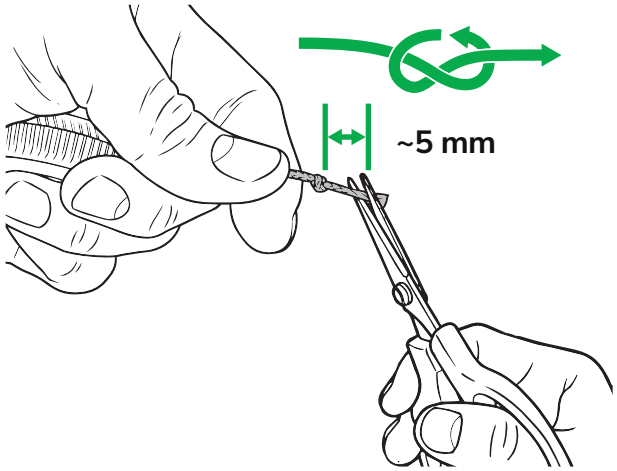


9 Melt the excess Lace, creating a cap which will prevent the knot from backing out.

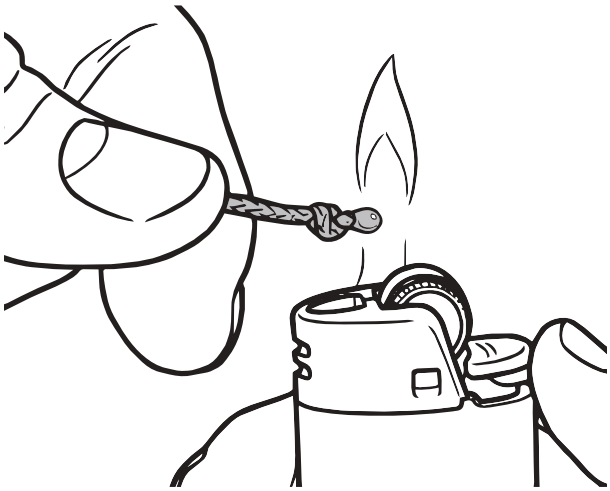


10 Pull firmly on the second Lace, seating the second knot tightly into the spool.

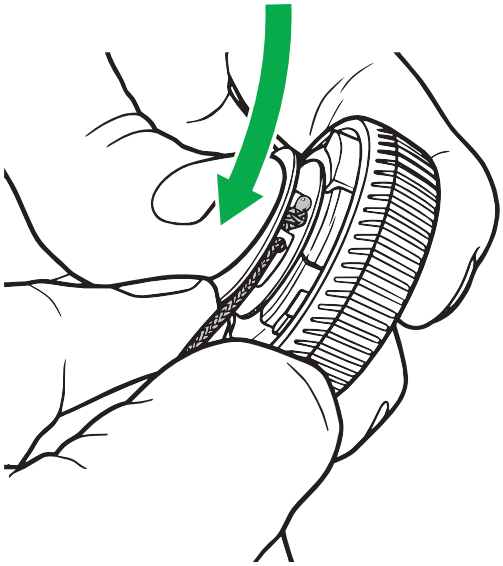

11 Pull all excess Lace from adjustable areas in device, drawing the Reel into the Collar. Ensure lace does not get caught or run under the spool.

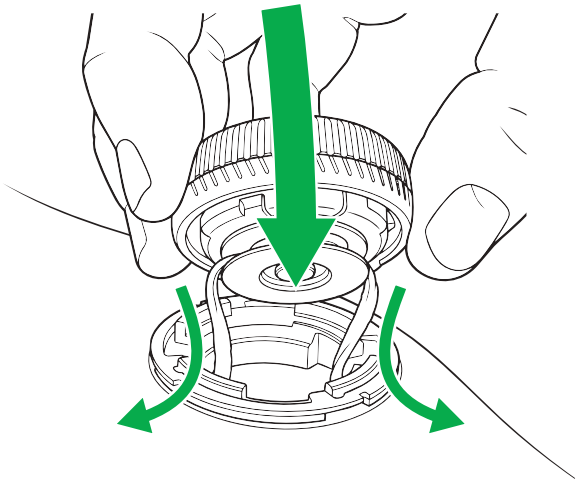


12 Align castle teeth on Reel with teeth on C2 Collar and fully seat Reel.

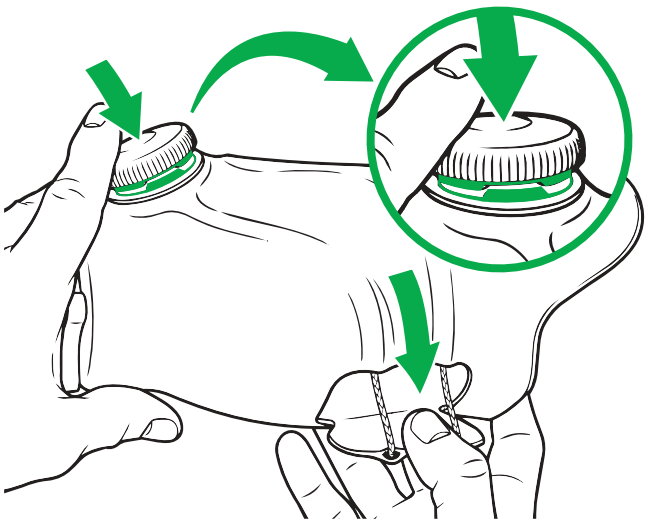


13 Confirm that there is a tight, even fit all around between dial and Lock Ring.

TIGHT, EVEN FIT ALL AROUND
between dial and Lock Ring.

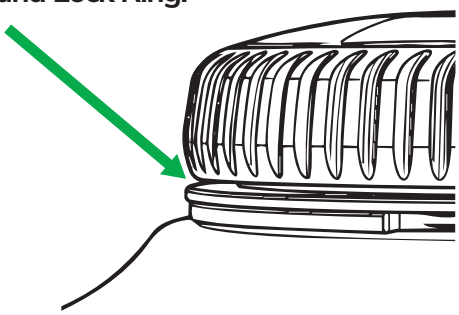


14 Orient C2 Reel Tool with “Lock” icon facing up. Then, insert tooth on C2 Reel Tool into one of four notches in Lock Ring.


C2 Reel Tool engages one of the four notches.

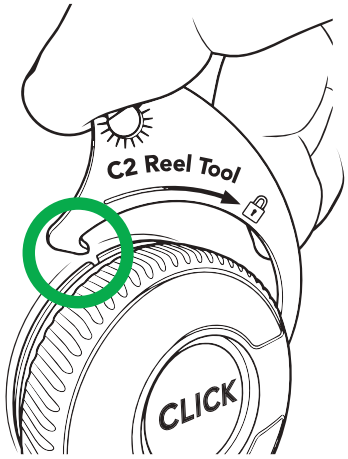

15 Rotate Lock Ring ~1/8th of a rotation clockwise to lock Reel into C2 Collar.

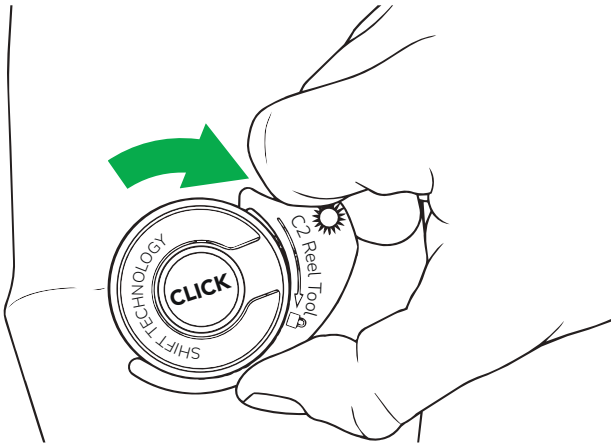

16 **Check that reel is locked into collar:** Visually check the Lock Ring notch is aligned with the silver mark on the C2 Collar. Ensure the Reel is locked in place by pulling up on the Reel.

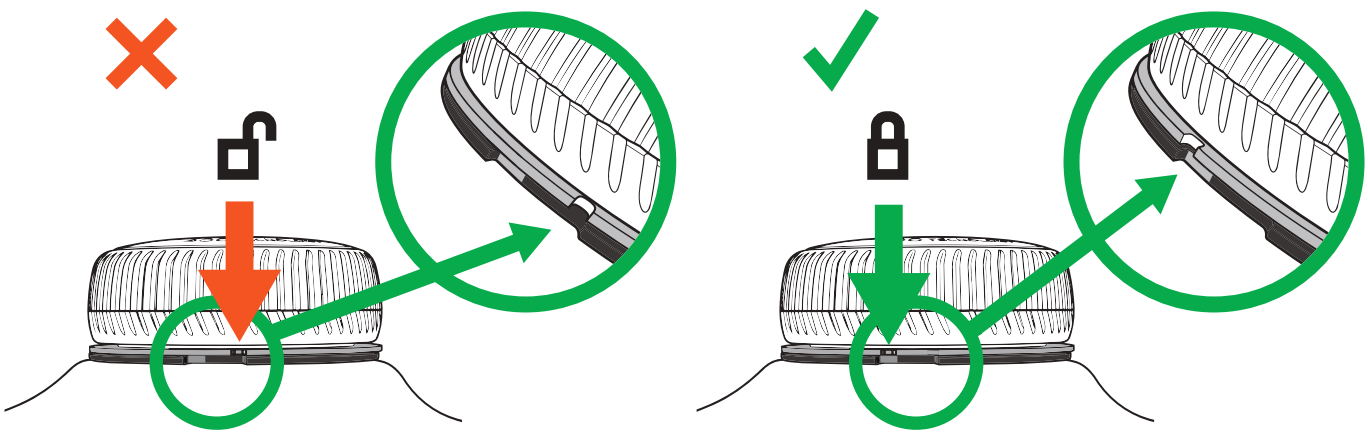

17 **Cycle the Reel multiple times to confirm full functionality.**

C2 Duo Reel™:

1. Turn dial clockwise to take in Lace and counter-clockwise to release Lace. Test and confirm operation of both the lower Rapid Dial and the top Power Dial.
2. Fully release Lace by pushing in the quick release button.
3. Test operation multiple times and confirm that the Reel operates smoothly to both take in and release Lace.

Great Job! You're done!

Don't forget to check out other innovative solutions from Click Medical:
https://clickmedical.co/